


SERVICE INSTRUCTIONS

MERGENTHALER 31

Letterpress is letterperfect

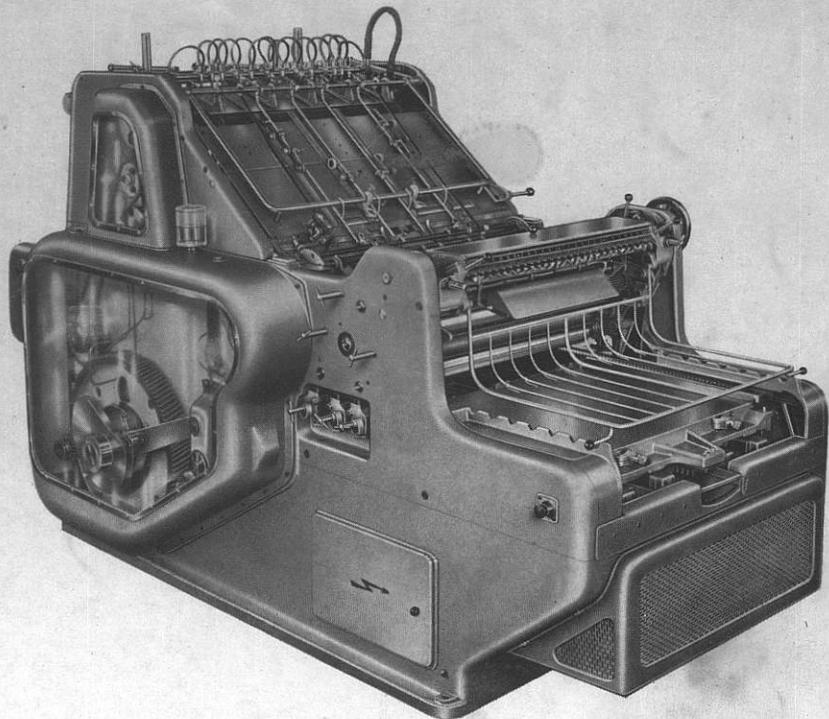

MERGENTHALER LINOTYPE CO.

PLATE N. 56968

CUSTOMER _____

CONTRACT N. _____

DATE _____

DATE OF SHIPMENT _____

I N D E X

| | |
|-------------------------------------|--------|
| Specifications | page 2 |
| Foreword | » 3 |
| Accessories and Equipment | » 3 |
| Lubrication | » 5 |

Press Operation

| | |
|--|--------|
| Controls | page 7 |
| Feeder | » 8 |
| Feedboard | » 10 |
| Side pull guides | » 11 |
| Front drop guides | » 12 |
| Printing cylinder | » 13 |
| Bed and Chase | » 14 |
| Delivery | » 14 |
| Ink Fountain | » 17 |
| Ductor roller | » 17 |
| Distributing and form inking rollers | » 18 |
| Automatic wash-up | » 19 |
| Compressed air and suction systems | » 19 |

Periodical maintenance

| | |
|---|---------|
| Tapes | page 21 |
| Drive belts | » 23 |
| Electric sheet detectors. Feed and delivery pile contacts | » 23 |
| Automatic cylinder lift | » 23 |
| Instructions for the electric equipment | » 25 |
| Instructions for the change of voltage and frequency | » 25 |
| Timing of feeder with press drive | » 26 |
| Feeder adjustment to paper size | » 27 |
| Feeder adjustment to paper type | » 29 |
| Feeder: troubles, their causes and how to correct | » 31 |
| Diagram of main controls | » 33-34 |
| Foundation diagram | » 35 |
| Overall dimensions and floor space diagrams | » 36 |
| Lubrication diagram | » 37 |